



**TO RESET FOLDCLICK WITHOUT
A TOW BALL AVAILABLE**

FoldClickTM

Alternative Reset Procedure

TO RESET FOLDCLICK WITHOUT A TOW BALL AVAILABLE



This is an alternate FoldClick reset procedure, if no tow ball is available to perform the procedure on.

The reset procedure may be required when the unit has been set in the unfolded configuration when not installed on a tow ball.

The unit is not intended to be opened when not installed.



TO RESET FOLDCLICK WITHOUT A TOW BALL AVAILABLE



- 01** Tilt the carrier backwards and rest on the main hoop. Make sure to do this on a clean surface or place something on the ground to prevent the hoop being scratched.



TO RESET FOLDCLICK WITHOUT A TOW BALL AVAILABLE



- 02** Using a pen/screwdriver etc, press the rearmost clamp shell into the mechanism. This action should be confirmed by an audible 'click'.



Press where shown



Final position after 'click'

TO RESET FOLDCLICK WITHOUT A TOW BALL AVAILABLE



- 03** Lift the pedal to fold the carrier up as per usual operation. It may be necessary to hold the top handle while lifting the pedal to fold.



RESET COMPLETED

TO RESET FOLDCLICK WITHOUT A TOW BALL AVAILABLE



To prevent needing to repeat the reset procedure in future, remember the below notes;

- Do not attempt to unfold the unit when not installed on a tow ball
- Ensure all hooks on the underside are always fully engaged after each function
- Never force the unit into position. If it feels like something is wrong, **STOP** and return the unit to the previous state prior to attempting again.